



Upgrade instructions V03.10

With version 310 shall the app CleverTouch Gen. 2 be used, this app you can find in your app-store.





CLEVERTOUCH Gen.2 

If you want to access it via your web browser (Google Chrome and Firefox is recommended), please use link below.

<https://e3.lvi.eu>

To upgrade your Touch E3, please follow the instruction below:

1. Use a **Micro SD card (max. 8GB FAT formatted)**
2. **Format** (Delete) the micro SD card.
*Attention, **delete all data** on the SD card. Please make sure that data that you want to keep from the SD card is backed up before!!!*
3. **Download the new firmware** from
<http://www.lvi.eu/downloads/software.htm>
4. **Extract (Unzip)** the downloaded file
5. **Copy all extracted files to your Micro SD card.** It has to contain 3 files
 - Old_conf.bin
 - Update.bin
 - wifi.hex
 - wifi.ini

 Old_conf.bin	2017-10-26 08:25	BIN-fil	2 048 kB
 update.bin	2020-11-25 17:32	BIN-fil	2 865 kB
 wifi.hex	2017-10-26 08:26	HEX-fil	505 kB
 wifi	2017-10-26 08:26	Konfigurationsinst...	1 kB

6. **Insert the Micro SD Card** to your Touch E3
7. ***Make sure your Touch E3 is securely connected to electricity. A power cut during upgrade might damage your device permanent!***
8. Go to the main page and choose **[MENU]**





- Choose **[Parameter]** by **press and hold** for min. 5 seconds:



- Choose **[Update Firmware]** from the menu




- Confirm with the **“Check mark”** on the right bottom by **press and hold** it for min. 5 seconds




- The **upgrade could take some time** (up to 5 minutes). Depending on firmware release you had before, you will see between 1 to 3 upgrade cycles, where the TOUCH E3 is rebooting and upgrading automatically

Do not disconnect from power or switch it off at any time during upgrade process.

- Go to the main **[MENU]** and wait that your  **WiFi Icon turns blue (active)**



- Turn off your Touch E3**, with the button on the rear side **wait 30 seconds** and **turn it on again**.

- Go again to the main **[MENU]** and wait that your  **WiFi Icon turns blue (active)** again.

- Eject the SD card** from your Touch E3 after upgrade

- Reboot (Off / On)** your Touch E3 now again to finalize the process

Touch E3-enheten är nu uppdaterad

If you want to **update another device**, follow the instructions from the top again. Please make sure you **copy again and overwrite the downloaded files to the SD card**, as one file is missing after the update.